SureStrike Mairsoft Training



Flash User Guide

Please read the User Guide in full before using the Laser Ammo FLASH Adapter


AirSoft Rifle Flash Suppressor Adapter and SureStrike™ Vibration Cartridge

Please read the User Guide in full before using the Laser Ammo FLASH Adapter.

- WARNING: All airsoft safety procedures apply when using the FLASH Adapter.
- WARNING: AirSoft guns can cause serious injuries or death! Store ammunition in a separate area when using the FLASH adapter.
- **ATTENTION:** AirSoft guns warranties may be voided with the use of the LA FLASH Adapter

WARNING: AirSoft guns can cause serious injuries or death! Always store ammunition (pellets, BBs) in an area that is separate from your training area.

Parts

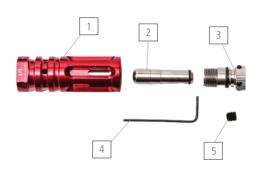

- 1. FLASH Housing
- 2. Vibration SureStrike cartridge (not included)
- 3. Cartridge Retainer
- 4. 1.5mm Allen L key
- 5. Spare screw

Assembly

 Assemble the Vibration Laser cartridge by first inserting the battery pack into the Laser module, flat side (+) facing away from the laser (up). Thread the cap on to the Laser module. Tap on the cap of the assembled cartridge to insure the laser is working correctly.



2. Insert the Vibration Surestrike cartridge (2) into the cartridge retainer (3) with the laser body entering first, leaving the cap on the outside of the retainer. Make sure the Allen screws are opened enough to allow the cartridge to seat at the bottom of the retainer. Ensure front of laser is flush with the Laser Retainer. Gently screw in all Allen screws equally until they bottom out but do not tighten.



3. Remove the flash suppressor from your Airsoft Rifle by unscrewing it, please note the threads are commonly left hand and may also be fastened by a pin. Make sure you have the correct thread FLASH adaptor before proceeding.

Assembly



4. Thread the Laser Retainer assembly into the suppressor Adaptor (1) until it bottoms out, then thread it back out only enough to place the first Allen screw pointing up. This will allow adjustment points for windage and elevation.





5. Screw the Suppressor adapter onto the muzzle of your Air Soft rifle and tighten.





Windage & Elevation

The retainer has 4 adjustment screws for aligning the laser. The screws on the sides are used for windage, and the screws on the top and bottom are used for elevation



- Holding your Airsoft rifle, preferably on a rest for accuracy, fire at your target from the distance you would normally practice at.
- If your shot is to the left, adjust by unscrewing the screw on the right side and tighten the screw on the left. Do not overtighten.
- · If your shot is higher, adjust by unscrewing the screw on the bottom and tighten the screw on the top. Do not overtighten.

Always begin by opening the opposite screw first, to allow the cartridge to move as you tighten the other side.

Always keep your firearm pointed away from you.

Changing the Battery

The battery may be changed without opening the alignment Allen screws and losing adjustments.

- Unscrew and remove the cartridge retainer assembly (3).
- Unscrew the Vibration action cap (cap only! Leave the laser inside the retainer) and remove the old battery.
- Reassemble with new battery.



Maintenance

The Surestrike $^{\text{TM}}$ Laser Cartridge is an electronic device and should always be treated as such.

Wipe the Laser cartridge only with a soft fabric - do not immerse in solvents or cleaning agents.

Clean the laser lens using a glass cleaner and cotton swab.

Take out battery when not in use.

Warranty

Laser Ammo warrants that this product shall be free from material defects and defects in workmanship for the earlier occurrence of: A period of one (1) year from the date of the purchaser's receipt of the product. Notice of any warranty claim must be received by Laser Ammo, in writing, prior to the expiration of the warranty period. Laser Ammo reserves the right to inspect the product before honoring the warranty. Laser Ammo's warranty is limited solely to the above and applies only for the period set forth. Laser Ammo will not be liable for any loss, damage, direct, incidental or consequential damages of any kind, whether based upon warranty, contract, negligence, or strict liability, or arising in connection with the sale or use of the product by the user or any third party. Laser Ammo's warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, or modification. This limited warranty does not apply to any product on which the original identification information has been altered, obliterated or removed, Laser Ammo will, at its sole option, either repair or replace any part of the

Warranty

product that proves defective by reason of improper workmanship or materials. In all events, Laser Ammo's maximum liability to the purchaser related to any warranty claim or defect with respect to the product shall not exceed the contract price for the specific product claimed to be defective or unsuitable, or alleged to have been the cause of any damage to the purchaser or any third party. Airsoft guns warranties may be voided with the use of the laser Ammo Airsoft Adapter Cartridge. Laser Ammo does not assume any liability regarding the operating condition of the airsoft gun. The foregoing is in lieu of all other warranties, oral, expressed or implied, including, but not limited to, any implied warranties of fitness for a particular purpose.

The provisions of this section shall be applicable to both implied warranties (if any) and expressed warranties.

Support

Have a question about your product?

Email us at Support@laser-ammo.com or visit our website at Laser-Ammo.com

United States Sales and Operations Laser Ammo USA Inc PO Box 222017 Great Neck, NY 11022



Product of Laser Ammo USA, Inc. Phone: (516) 858-1262 (U.S.)

Laser-Ammo.com