


# SureStrike™

*Airsoft Laser Training*



LASER AMMO  
TRAINING TECHNOLOGIES

**SureStrike™ Airsoft Training**

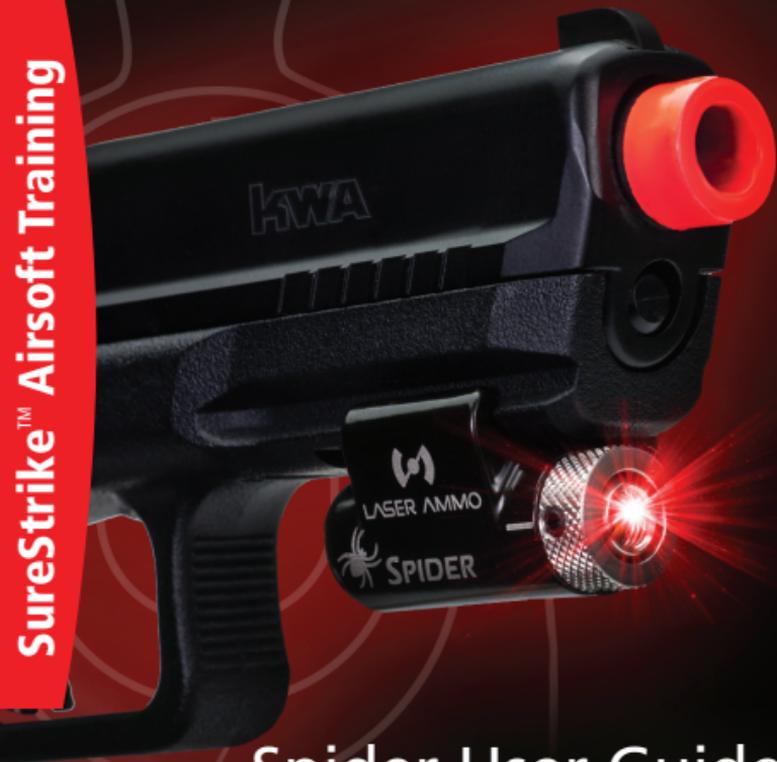

SAFETY



ACCURACY

## Spider User Guide

*It is recommended that you read the complete user guide before using your Laser Ammo Spider.*

# AirSoft SPIDER Adapter and SureStrike™ Vibration Cartridge

Please read the User Guide in full before using  
the Laser Ammo SPIDER Adapter


 **WARNING:** All airsoft safety procedures apply when using the SPIDER Adapter.

 **WARNING:** AirSoft guns can cause serious injuries or death! Store ammunition in a separate area when using the SPIDER adapter.

 **ATTENTION:** AirSoft guns warranties may be voided with the use of the SPIDER Adapter

**WARNING: AirSoft guns can cause serious injuries or death! Always store ammunition (pellets, BBs) in an area that is separate from your training area.**

# Parts

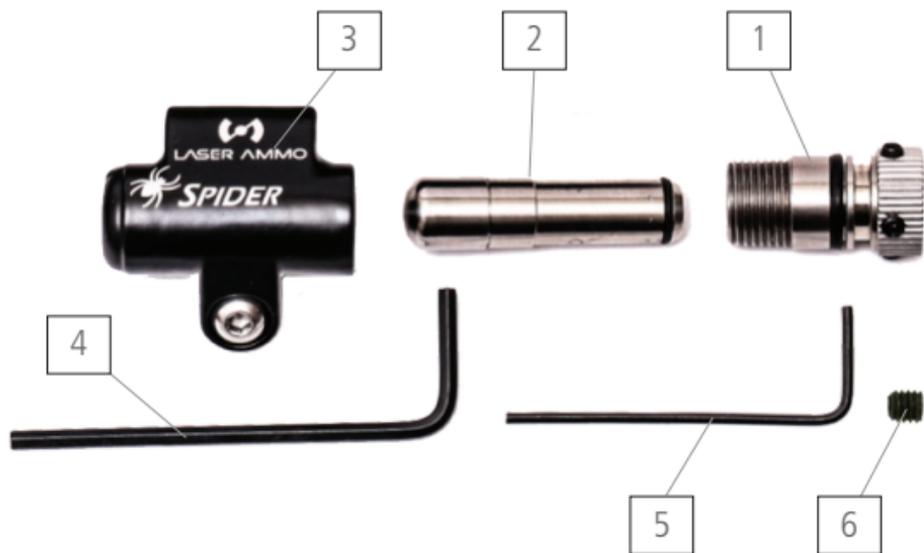

1. Spider Housing

2. SureStrike Vibration Cartridge (not included)

3. Cartridge Retainer

4. 2.5mm Allen Key


5. 1.5mm Allen Key

6. Spare screw


# Installation

1. Assemble the Vibration Laser cartridge by first inserting the battery pack into the Laser module, flat side (+) facing away from the laser (up).

Thread the cap on to the Laser module. Tap on the cap of the assembled cartridge to insure the laser is working correctly.

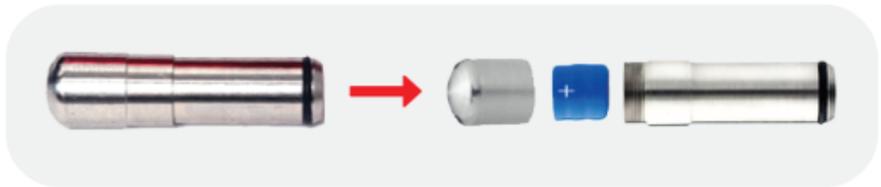


2. Insert the Vibration Surestrike cartridge (2) into the cartridge retainer (3) with the laser body entering first, leaving the cap on the outside of the retainer. Make sure the Allen screws are opened enough to allow the cartridge to seat at the bottom of the retainer. Ensure front of laser is flush with the Laser Retainer. Gently screw in all Allen screws until they bottom out but do not tighten.

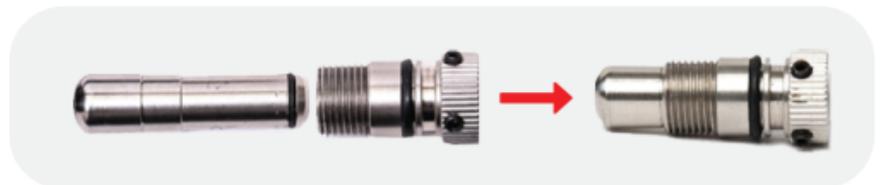

# Installation

3. Install the retainer with the cartridge into the Spider housing. Thread the adapter all the way down, then move it back until the first Allen screw aligns with the index mark on side the Spider.

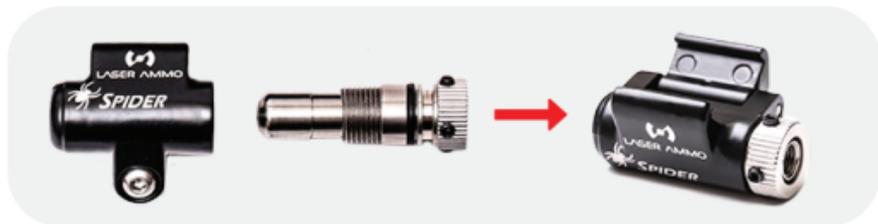



4. Install the SPIDER on your firearm rail using the 2.5mm Allen key.



- When installed correctly the windage screws will be on the sides and the elevation screws on the top and bottom of the laser cartridge adapter.

# Windage & Elevation

The retainer has 4 adjustment screws for aligning the laser. The screws on the sides are used for windage, and the screws on the top and bottom are used for elevation.

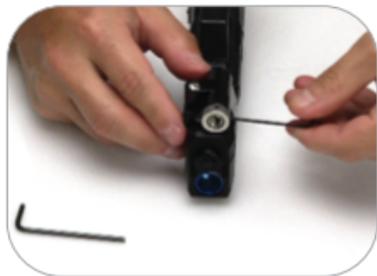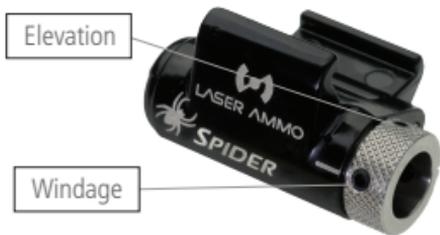

- Holding your Airsoft pistol, preferably on a rest for accuracy, fire at your target from the distance you would normally practice at. \*For easier alignment, in the first activation after replacing batteries, the Surestrike will act as a boresight (constant on) for the first 5 shots.\*
- If your shot is to the left, adjust by unscrewing the screw on the right side and tighten the screw on the left. Do not overtighten.
- If your shot is higher, adjust by unscrewing the screw on the bottom and tighten the screw on the top. Do not overtighten.  
\*If needed, slightly open the retainer to gain access to the top elevation screw, perform the adjustment and return the retainer to the previous position according to the index mark\*



**Always keep your firearm pointed away from you.**

# Dissassembly & Battery

The battery may be changed without opening the alignment Allen screws and losing adjustments.

- Unscrew and remove the cartridge retainer assembly (3)
- Unscrew the Vibration action cap (cap only! Leave the laser inside the retainer) and remove the old battery.
- Reassemble with new battery.

## Maintenance

The Surestrike™ Laser Cartridge is an electronic device and should always be treated as such.

Wipe the Laser cartridge only with a soft fabric - do not immerse in solvents or cleaning agents.

Clean the laser lens using a glass cleaner and cotton swab.

**Take out battery when not in use.**

# Warranty

Laser Ammo warrants that this product shall be free from material defects and defects in workmanship for the earlier occurrence of:  
A period of one (1) year from the date of the purchaser's receipt of the product.

Notice of any warranty claim must be received by Laser Ammo, in writing, prior to the expiration of the warranty period. Laser Ammo reserves the right to inspect the product before honoring the warranty.

Laser Ammo's warranty is limited solely to the above and applies only for the period set forth.

Laser Ammo will not be liable for any loss, damage, direct, incidental or consequential damages of any kind, whether based upon warranty, contract, negligence, or strict liability, or arising in connection with the sale or use of the product by the user or any third party. Laser Ammo's warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, or modification.

# Warranty

This limited warranty does not apply to any product on which the original identification information has been altered, obliterated or removed.

Laser Ammo will, at its sole option, either repair or replace any part of the product that proves defective by reason of improper workmanship or materials.

In all events, Laser Ammo's maximum liability to the purchaser related to any warranty claim or defect with respect to the product shall not exceed the contract price for the specific product claimed to be defective or unsuitable, or alleged to have been the cause of any damage to the purchaser or any third party.

Airsoft guns warranties may be voided with the use of the laser Ammo Airsoft Adapter Cartridge. Laser Ammo does not assume any liability regarding the operating condition of the airsoft gun. The foregoing is in lieu of all other warranties, oral, expressed or implied, including, but not limited to, any implied warranties of fitness for a particular purpose. The provisions of this section shall be applicable to both implied warranties (if any) and expressed warranties.

# Support

## **Have a question about your product?**

Email us at [Support@laser-ammo.com](mailto:Support@laser-ammo.com)  
or visit our website at [Laser-Ammo.com](http://Laser-Ammo.com)

United States Sales and Operations  
Laser Ammo USA Inc  
PO Box 222017  
Great Neck, NY 11022





LASER AMMO  
TRAINING TECHNOLOGIES

Product of Laser Ammo USA, Inc.  
Phone: (516) 858-1262 (U.S.)

**Laser-Ammo.com**