


**Step 1: Reset the Speed Loader**

Ensure the spring-loaded knob is reset as depicted in the right picture. If not, twist the knob until it securely locks into place.

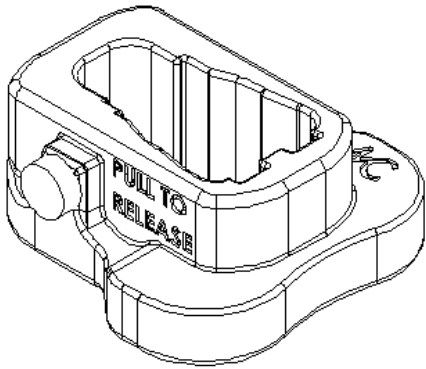

**KEL-TEC PMR30/CMR30  
 Speed Loader for Stainless Steel Magazine  
 Instructions**



**Step 2: Insert the First Round into the Magazine**

Insert the first round into the magazine. This action creates a gap between the follower and the magazine, enabling the speed loader to securely latch onto it. Position the speed loader as demonstrated, and you should hear an audible click. The speed loader is now ready to be used.

**Step 3: Load the Magazine**

Load the magazine by gently pushing down the follower enough to accommodate the next round. Avoid lowering the follower excessively, as it may lead to too much space and result in the misplacement of rounds in the round separator.



#### Step 4: Load the Magazine to the Desired Round Count

Load the magazine to your preferred round count. Utilize the indicator lines within the magazine to swiftly identify the number of rounds. The picture below illustrates a magazine loaded with 30 rounds for reference.



#### Step 5: Disassemble the Speed Loader

Pull the speed loader upward. To disassemble, pull the knob out enough to clear the top of the slot. The speed loader should now be separate from the magazine. Reset the knob as shown in step 1 for the next loading session.



You must be 18 yrs of age to purchase. We advise that all parts purchased from our inventory be installed and inspected by a qualified gunsmith. Modifying your weapon may be prohibited in your state. Do not modify your sear or hammer engagement surfaces. Before installing please be sure to check all local state and federal laws. By installing this part you agree to take full responsibility for any and all legal, health and warranty consequences that may be incurred.

(P.) (727)223-1816 (E.) Help@Mcarbo.com