


OUTER IMPACT

RUGER MARK I, II, III, IV, 22/45-M.R.A (Modular RedDot Adapter) Mounting Instructions


Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is recommended that adapter be installed by a Gun Smith.

WARNING: Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.

Step 1: Locate bag marked "MNT HDWR" and remove the two torx screws.

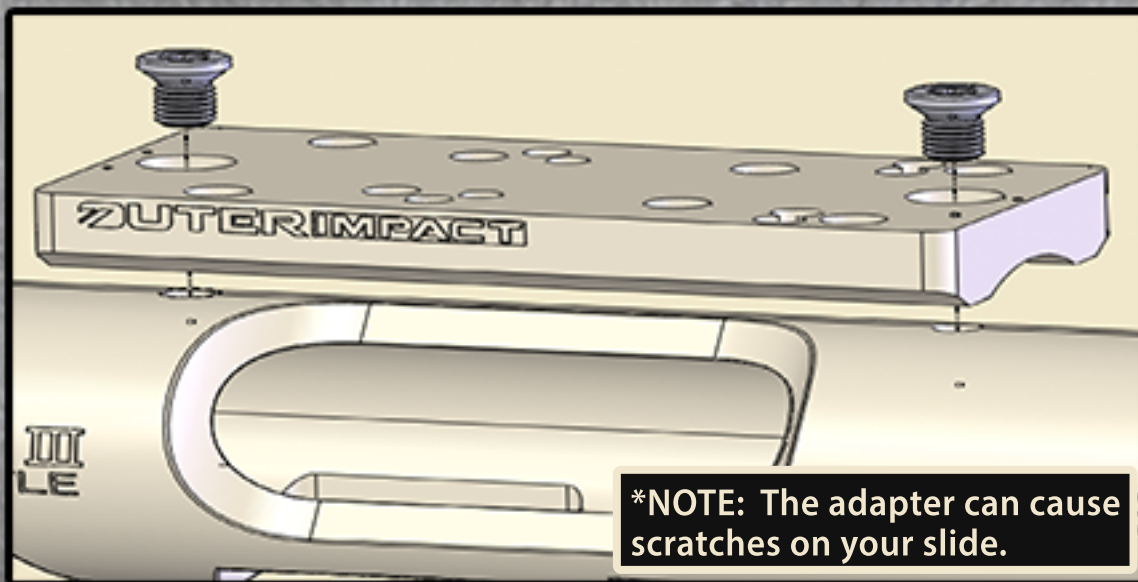

Step 2: Align M.R.A. as illustrated above. Fasten M.R.A. with torx screws. Torque to 25 in/lbs.

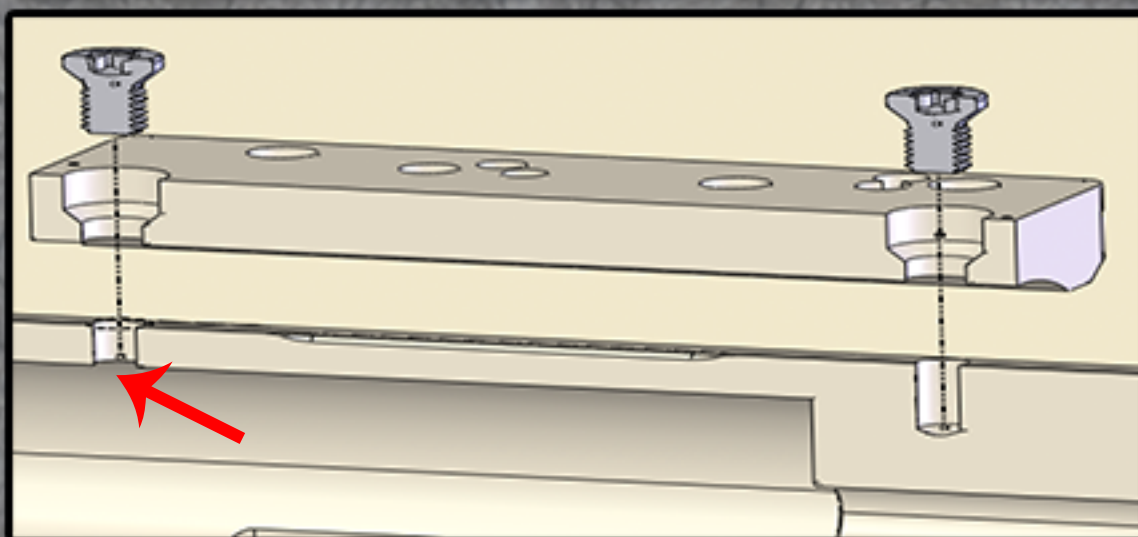

STEP 3: Inspect the inside of the receiver, to confirm the end of the torx screw does not interfere with the bolt.

| MOUNTING PATTERNS: | SIGHT Manufacture | SIGHTS Model | SCREWS USED |
|---|------------------------------|--------------------------------|---|
| The RED circles indicate locations for 2 included alignment pins | | | |
| The BLACK circles indicate locations for mounting screws ---- Torque Screws to 12 IN/LBS | | | |
| | VORTEX BURRIS | VIPER FAST FIRE II/III | M3 x 8mm |
| | DOCTOR INSIGHT EOTECH | MRDS MRDS | SIGHT SUPPLIED SCREWS WORK OR UTILIZE PROVIDED M3 x 6mm |
| | VORTEX | VENOM | M3 X 6mm |
| | TRUICON | RMR | SIGHT SUPPLIED SCREWS WORK |
| | LEUPOLD | Delta Point Delta Point Pro | SIGHT SUPPLIED SCREWS WORK |
| | VORTEX SIG SAUER CMORE | RAZOR ROMEO3 RTS & STS | M4 SCREWS |

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.