

OUTERIMPACT

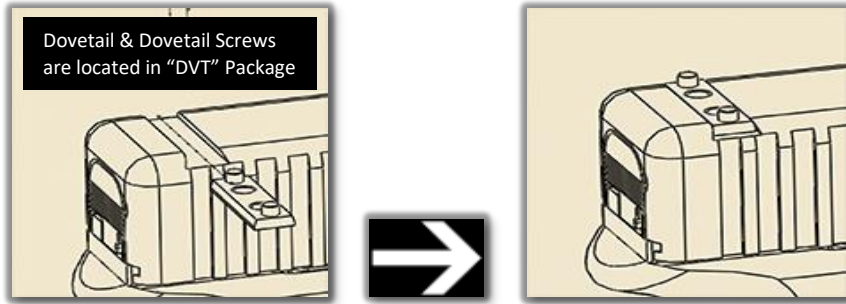
S&W SD9VE/40VE M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

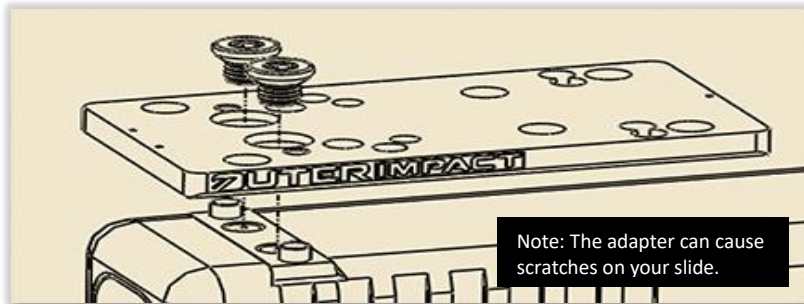
Step 1: Remove existing rear sight from slide

Step 2: Install OUTERIMPACT dovetail onto slide.





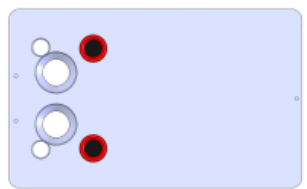


Step 3: Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb.**



WARNING: Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

Sight Manufacturer	Sight Models	Screws Used
Swampfox	Sentinel	M3 x 8 
Springfield	Wasp	
J-Point	Micro	M3 x 6 
Crimson Trace	1550	Sight Supplied Screws Work
Shield	RMSc/SMSc	M3 x 8 
Holosun	407/507K	M3 x 10 
Romeo	Zero	
		

Note: The adapter has an intentional curve. This curve will flatten out when mounted.

Utilize liquid thread locker upon final installation of all threaded fasteners