


OUTERIMPACT

PICATINNY BASE

Mounting Instructions

Utilize a certified Gun Smith to install Base. It is possible to install Base if a Gun Smith is not accessible, but it is recommended that Base be installed by a Gun Smith.

WARNING: *Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.*

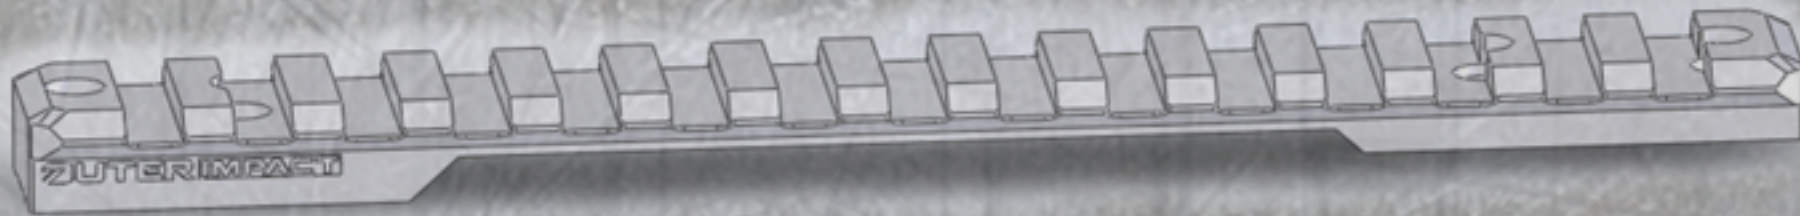

STEP 1: Visually inspect your firearm for burrs around mounting holes and remove if necessary.

STEP 2: Remove all grease and oil from: base mounting surfaces, contact surfaces, and tapped holes in the receiver.

STEP 3: Place single piece picatinny rail scope mount base on the receiver. Make sure all holes line up correctly. Using a T-10 Torx wrench, loosely install mounting screws. After confirming, once again, that picatinny rail scope base fits properly, tighten Torx screw to 20 in-lbs of torque. (Warning: Make sure you are using in-lbs and not ft-lbs)

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.

Thank You For Choosing Outerimpact