

# OUTERIMPACT


## Ruger American and Ruger 57 M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

**Step 1:** Remove existing rear sight from slide

**Step 2:** Install OUTERIMPACT dovetail onto slide. Dovetail and dovetail screws are located in bag marked "DVT."

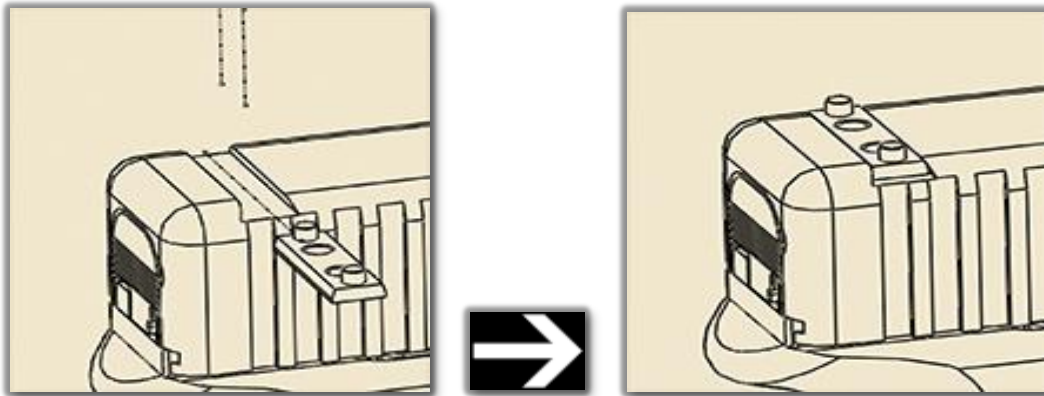

**Step 3:** Test fit the Red Dot sight to Outerimpact adapter, utilizing red dot pattern installation chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

**Step 4:** Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb.** We recommend applying blue thread locker to all threads upon final installation.

