



Canik METE M.R.A. (Modular Red Dot Adapter)


Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Remove existing rear plate from the firearm.

Step 2: Be sure to keep the factory screws and washers after removing the factory cover plate. You will be able to use them to return the pistol to the original configuration.

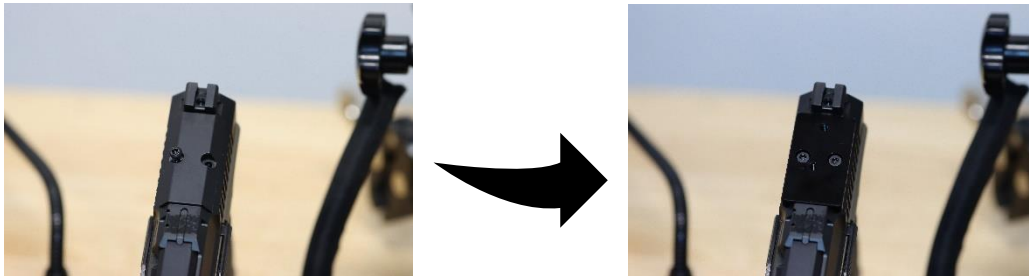

Step 3: Using the Socket head cap screws in the MNT HDWR bag, secure the foundation plate of the OuterImpact mount to the slide with 15 **in/lbs** of torque.

Step 4: Test fit the Red Dot sight to the OuterImpact adapter, utilizing the red dot pattern installation chart. Note: Make sure the screws do not stick out beyond the bottom of the adapter. After test fitting, remove Red Dot sight from the adapter.

Step 5: Secure the top MRA plate to the foundation using the taper headed screws in the MNT HDWR bag . Torque to 15 **in/lb**. We recommend applying blue thread locker to all threads upon final installation.

