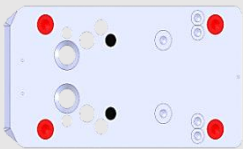



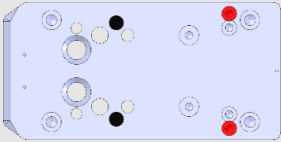

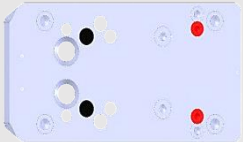
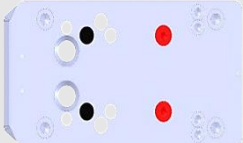


Mossberg 500, 535, 590, 835, 930, 935 M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear. Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

- Step 1:** Locate bag marked “MNT HDWR” and remove the 2 Torx screws.
Step 2: Choose one of the 2 mounting locations, either forward or rearward mounting holes.
Step 3: Remove the factory screws from receiver in the desired mounting locations.
Step 4: Align M.R.A. plate over the chosen mounting holes.
Step 5: Fasten M.R.A. plate to receiver utilizing the 2 Torx headed screws.
Step 6: Torque screws to **25 in/lbs.**
Step 7: Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to **12 in/lbs**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
<ul style="list-style-type: none"> • The RED circles indicate locations for 2 included alignment pins • The BLACK circles indicate locations for mounting screws -- Torque to 12 in/lb. 			
	Vortex Burris UTG TrueGlo	Viper Fast Fire 3 Reflex Micro Dot	M3 x 8 
	Burris Doctor Insight Eotech	Fast Fire 2 MRDS MRDS	M3 x 6 
	Vortex	Venom	M3 x 6 
	Trijicon	RMR	#6 
	Holosun	507c	Additional Screw Purchase Required
	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws work Additional Screw Purchase Required
	Shield	RMS	
	Vortex Sig Sauer CMORE	Razor Romeo 3, MAX, XL RTS & STS	M4 