

OUTERIMPACT


H&K USP M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Remove existing rear sight from slide. **NOTE: Dovetail slot is directional and the rear sight should be removed from right to left.**

Step 2: Install OUTERIMPACT dovetail onto slide. **NOTE: New dovetail should be inserted from Left to right.** **NOTE: New dovetail steel dowels should be placed toward the front of the slide.** Dovetail and dovetail screws are located in bag marked "DVT."

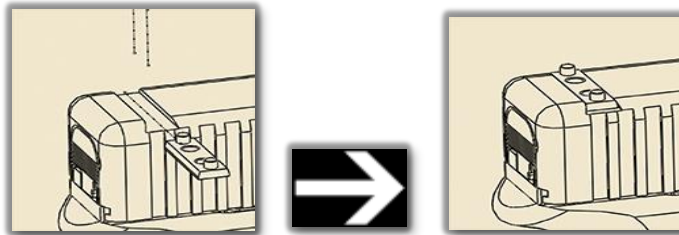

Step 3: Test fit the Red Dot sight to Outerimpact adapter, utilizing red dot pattern installation chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb.** We recommend applying blue thread locker to all threads upon final installation.



Note: Utilize blue liquid thread locker upon final installation of all