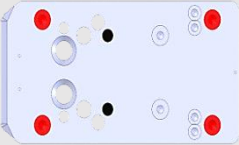




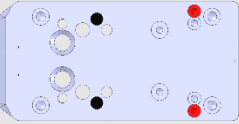

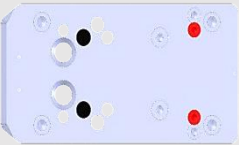
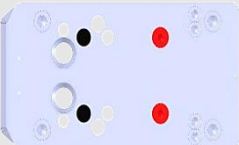



# OUTER IMPACT

## RED DOT PATTERN INSTALLATION INSTRUCTIONS

Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to **12 in/lbs**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
<ul style="list-style-type: none"> <li>The <b>RED</b> circles indicate locations for 2 included alignment pins</li> <li>The <b>BLACK</b> circles indicate locations for mounting screws -- Torque to 12 in/lb.</li> </ul>			
	Vortex Burris UTG TruGlo Crimson Trace Springfield  Sightmark	Viper Fast Fire 3&4 Reflex Micro Dot Tru-Tec CTS-1250 Dragonfly (must use OEM spacer plate) Mini Shot	M3 x 8   M3 x 9 
	Burris Doctor Insight Eotech	Fast Fire 2  MRDS MRDS	M3 x 6 
	Vortex	Venom	M3 x 6 
	Trijicon	RMR/SRO	#6 
	Holosun	407C/507C	#6 (use shorter set in the bag)
	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws work  Additional Screw Purchase Required
	Shield	RMS	Sight Supplied Screws Work
	Bushnell	RXS-100 and 250	
	Vortex	Razor	M4 x 10 
	Vortex	Defender CCW	Sight Supplied Screws
	Sig Sauer	Romeo 3, MAX, XL	Sight Supplied Screws
	CMORE	RTS & STS	Sight Supplied Screws
	Crimson Trace	1250 & 1550	M4 x 10
	Springfield	Wasp	M4 x 10
	SOUSA	DARC Micro	M4 x 10
	Athlon	Midas EDC	Sight Supplied Screws