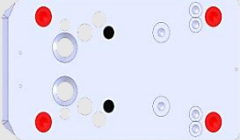




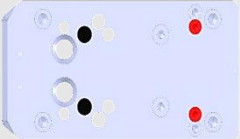


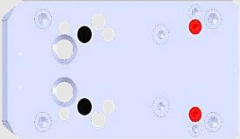


# OUTERIMPACT

## RED DOT PATTERN INSTALLATION INSTRUCTIONS

Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to **12 in/lbs**

**All screws are provided by OuterImpact unless otherwise noted.**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used	
	Vortex	Viper	M3 x 8 	
	Burris	Fast Fire 3&4	OEM Screws	
	UTG	Reflex Micro Dot		
	TruGlo	Tru-Tec		
	Crimson Trace	CTS-1250 CT RAD		
	Springfield	Dragonfly (must use OEM spacer plate)	M3 x 8 Socket Flat Head	
	Vector Optics	Frenzy X	M3 x 9 	
	Sightmark	Mini Shot		
		Burris	Fast Fire 2	M3 x 6 
		Doctor	MRDS	
Insight		MRDS		
Eotech				
	Vortex	Venom	M3 x 6 	
	Trijicon	RMR/SRO	#6 	
	Holosun	407C/507C/507Comp	#6 (use shorter set in the bag)	
	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws work	
	Shield	RMS	Additional Screw Purchase Required	
	Bushnell	RXS-100 and 250	Sight Supplied Screws Work	

	<p>Vortex</p>	<p>Razor</p>	<p>M4 x 10 </p>
	<p>Vortex</p> <p>Sig Sauer</p> <p>CMORE</p> <p>Crimson Trace</p> <p>Springfield</p> <p>SOUSA</p> <p>Athlon</p>	<p>Defender CCW</p> <p>Romeo 3, MAX, XL</p> <p>RTS &amp; STS</p> <p>1550 / CT RAD Micro</p> <p>Wasp</p> <p>DARC Micro</p> <p>Midas EDC</p>	<p>Sight Supplied Screws</p> <p>Sight Supplied Screws</p> <p>Sight Supplied Screws</p> <p>M4 x 10</p> <p>M4 x 10</p> <p>M4 x 10</p> <p>Sight Supplied Screws</p>