
Installing Adapters: 40S&W, 45ACP, 45GAP, 357sig.

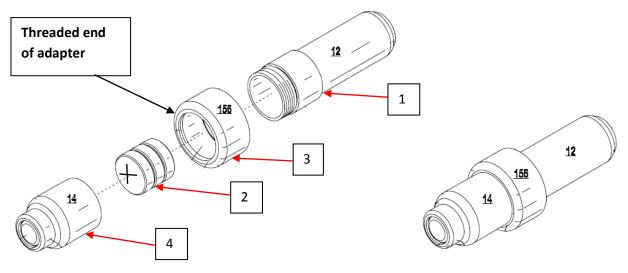

A. Installation:

NOTE: Only the 9mm action cap will work with the adapters! All types of adapters (including revolver and shotgun adapters) use the 9mm action cap.

- 1. Remove the 9mm action cap (5) from the laser assembly (1).
- 2. Place the adapter (3) with the **threaded end up**, (as shown in the picture) on the threaded end of the laser assembly.

Caution: Installing the adapter upside down will damage the threads.

Carefully engage the thread to the laser assembly (1) and thread the adapter
(3) down until it stops.

Caution: Do not use force.

- 4. Insert the battery pack (2) according to the drawing (do not remove the shrink wrap from the battery).
- 5. Take the <u>9mm action cap only</u> (4) and install it on the laser assembly (1) with the battery installed.
- 6. The 9mm action cap (4) will thread down to the adapter and hold it in place.
- 7. Verify the threading is fully closed and that there is no gap.
- 8. Once the adaptor is installed, the SureStrike is used in the same manner as a 9mm SureStrike and will require the use of the safety pipe and nut.
- **B. Disassembly:** Reverse the assembly procedure.